

# USER GUIDE

# PS800

## PORTABLE POWER STATION






 

 


# CONTENTS

<b>1.</b>	<b>Product Overview</b>	<b>4</b>
	Overview	4
	Package Contents	4
	XT60 Port	7
	AC Input	7
	Overload Protection	7
	LCD Features	8
	UPS Mode	9
	UPS Connections	9
<b>2.</b>	<b>Charging</b>	<b>10</b>
	Solar Panel Charging	10
	AC Charger Charging	10
	Car/Vehicle Charging	11
<b>3.</b>	<b>Fault Resolution</b>	<b>12</b>
<b>4.</b>	<b>Specifications</b>	<b>13</b>
<b>5.</b>	<b>Safety Precautions</b>	<b>14</b>
<b>6.</b>	<b>Contact Us</b>	<b>Back Page</b>

# PRODUCT OVERVIEW
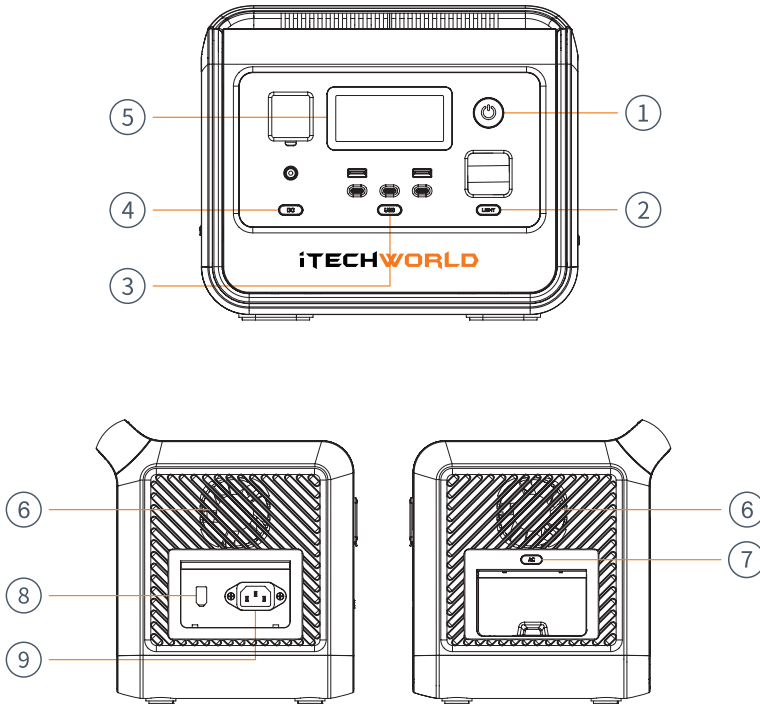
## Package Contents




XT60 to 50A Anderson

AC Charger

Car Charger

User Guide

Cable Storage Bag

① MAIN POWER CONTROL

② LIGHT CONTROL

③ USB CONTROL

④ DC CONTROL

⑤ LCD DISPLAY

⑥ AIR INTAKE/OUTLET

⑦ AC 240V OUTPUT CONTROL

⑧ XT60 INPUT PORT




⑨ AC 240V INPUT PORT

## POWER CONTROL BUTTON

This is the master power button, a long press to turn on and a long press to turn off the unit (hold the button until the screen turns on/off). When not in use, please turn the unit off.

## USB CONTROL BUTTON

Make sure the power station is on before pressing the USB control button.  
Operation: short press to turn on/off.



 USB x 2	 USB-C x 2	 USB-C x 1
QC 3.0	20W	100W

## LED LIGHT CONTROL BUTTON

Short press to turn on and change the light mode between solid/SOS/flash. Long press to turn off the light while on any mode.

## DC CONTROL BUTTON

Make sure the power button is on before pressing the DC control button.  
Operation: short press to turn on/off.

 DC Output x 1	 Cig Output x 1
12V10A	12V10A

## LCD SCREEN DISPLAY

Informative LCD display presents the remaining power and use data. The LCD display will enter sleep mode after 30 seconds of inactivity and wake up when inputting charge or when any button is pressed. The device will remain active and won't enter sleep mode if it is either charging or discharging.

## AIR INTAKE/OUTLET (BUILT-IN COOLING FAN)

The PS800 utilises an internal cooling fan to ensure it operates within the appropriate temperature range. When the PS800 experiences a high output/input, it automatically turns on the fan. The fan may turn on intermittently to keep the internal temperatures within the operating range. Please ensure you do not block or cover the vents.

### **WARNING:**

Maintain a space of 30cm away from the side suction and exhaust vents to ensure proper heat dissipation.

## AC 240V OUTPUT BUTTON

To activate the AC output function, simply press the AC button. Keep in mind that AC output frequency and voltage may vary depending on your location. If you need to adjust these settings, follow these steps:

1. Press and hold the AC button for 3 seconds to enter the frequency switching mode. You'll notice that the 50Hz or 60Hz icon will start flashing on the display.
2. Give the AC button a short press again to select between 50Hz or 60Hz. Wait until the flashing icon stops and displays your chosen frequency (either 50Hz or 60Hz), which indicates a successful switch.
3. To adjust the voltage, quickly press the AC button 10 times. This will allow you to cycle through available voltage options.

By following these steps, you can easily customise the AC output frequency and voltage to suit your specific needs.

## XT60 PORT (SOLAR/CAR INPUT)

Use the included XT60 to 50A Anderson adapter to connect your solar panel. The maximum input of the solar panel is 200W and the maximum voltage is 50V (do not exceed 50V).

The cable we've supplied has a maximum rating of 50 amps, be sure to not to exceed this limit unless you've upgraded the cable.

### **WARNING:**

The XT60 port is an INPUT ONLY port.

## AC INPUT

Use the included wall socket to get 400W fast charging, which can fully charge the PS800 from 0 to 100% in 1.5 hours.

The PS800 should be charged directly by the wall socket, please do not use extension cords.


## OVERLOAD PROTECTION

To safeguard the power station from potential damage resulting from excessive AC input current due to lightning or grid fluctuations, the overload protector is designed to activate and disconnect the AC input in such situations.

If the overload protector has been triggered, and you need to restore the AC input, please follow these instructions:

1. First, ensure that the PS800 is turned off, and unplug all connected devices and ports from it.
2. Confirm that all connected ports are in their standard, normal state.
3. Now, you can turn on the PS800.

# LCD FEATURES

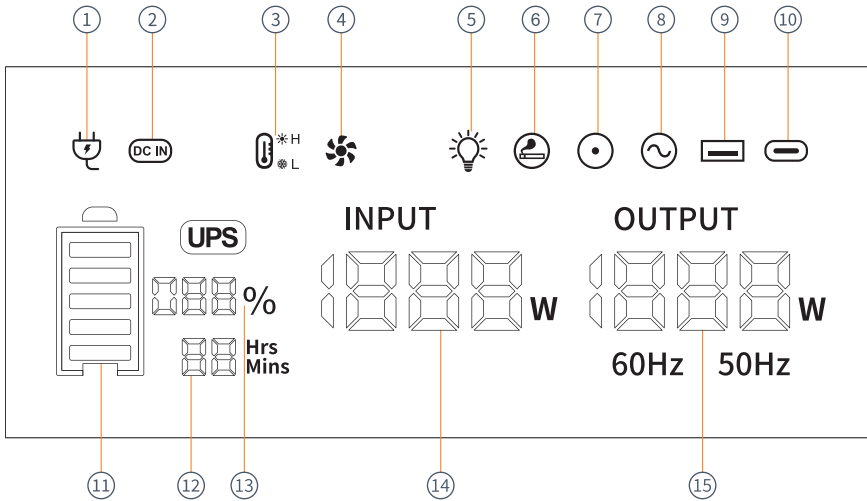

① AC CHARGING STATUS

② XT60 INPUT STATUS

③ HIGH/LOW TEMPERATURE

④ FAN STATUS

⑤ LED LIGHT STATUS

⑥ CIGARETTE PORT OUTPUT STATUS

⑦ DC OUTPUT STATUS

⑧ AC OUTPUT STATUS

⑨ USB OUTPUT STATUS

⑩ USB-C OUTPUT STATUS

⑪ BATTERY LEVEL INDICATOR

⑫ REMAINING DISCHARGE TIME

⑬ BATTERY PERCENTAGE INDICATOR

⑭ TOTAL INPUT POWER

⑮ TOTAL OUTPUT POWER



## UPS MODE

The PS800 has a bypass function, which means power will not pass through the battery; it will be taken directly from the AC output.


In this mode, the power source is the power grid, when there is an emergency power outage, the power source will switch to the battery within 10ms and protect the connected appliance.

## UPS CONNECTIONS

As shown in the figure below, connect the PS800 between the wall socket and the electrical appliances, ensuring the power of the PS800 is ON. When you turn on the electrical appliances, power will be taken directly from the grid.

In this state, when the power grid is cut off, it will automatically switch to the PS800 internal battery to supply power.

- In UPS mode, the maximum power output is 800W.
- In UPS mode, if the AC output exceeds 800W, the AC overload symbol will illuminate.

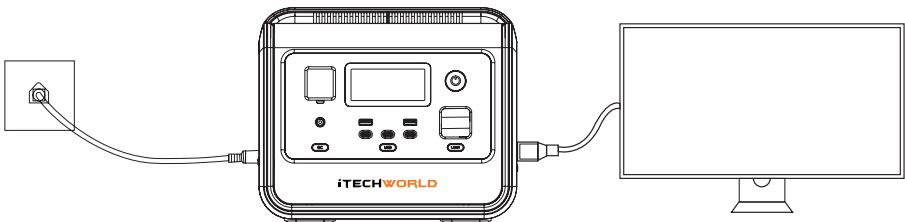


# CHARGING

## SOLAR PANEL CHARGING

1. Do not charge the PS800 via a solar panel that has a voltage exceeding 50V.
2. Supports 200W max solar input (solar panels not included), the charging time depends on the solar panel input.
3. To ensure proper operation, please verify that there is no regulator in the line. You will need to input unregulated solar power into the PS800 as it already contains a built-in regulator.

### Connecting Pattern 1

## THE AREA OF CHARGING

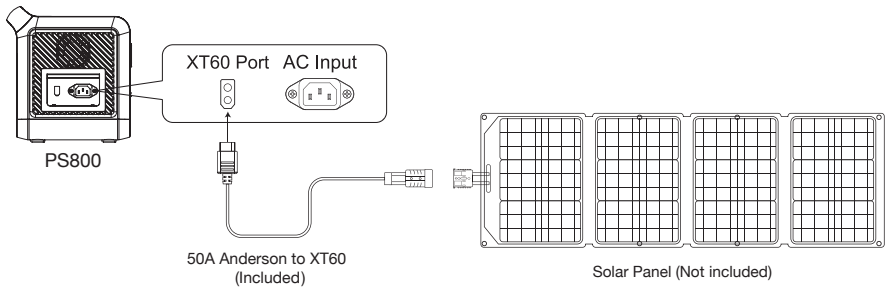


## AC CHARGER CHARGING

Use the AC charger provided to charge this unit. It will only require 1.5 hours to fully charge the PS800.






## CAR/VEHICLE CHARGING

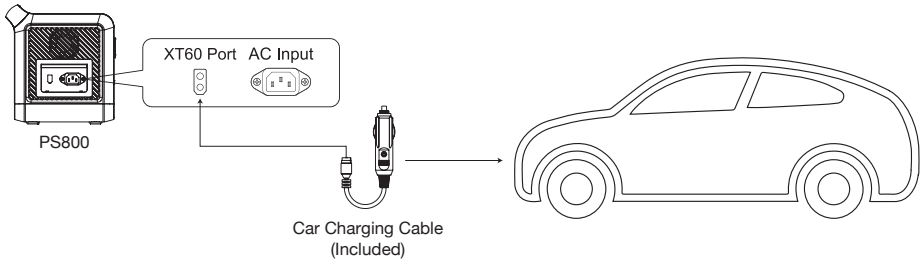It's important to use the car charger that was provided with the unit for charging. Car chargers usually provide lower power outputs, typically around 90-120 watts. As a result, charging times may be extended. If you require a quicker charge, it is recommended to use the AC adapter that came with the device. The AC adapter provides higher power output and is better suited for fast charging.



# FAULT RESOLUTION

Status	Explanation	Resolution
 <p data-bbox="87 419 277 472">Above icon flashes and buzzes</p>	<p data-bbox="329 336 533 416">The output exceeds the standard and it's short-circuited.</p>	<p data-bbox="566 280 1053 333">1 - First, ensure that the PS800 is turned off, and unplug all connected devices and ports from it.</p> <p data-bbox="572 363 1048 416">2 - Confirm that all connected ports are in their standard, normal state.</p> <p data-bbox="628 446 988 472">3 - Now, you can turn on the PS800.</p>
 <p data-bbox="79 663 286 743">The temperature warning icon flashes and buzzes</p>	<p data-bbox="337 608 524 719">This product has surpassed the recommended temperature limit.</p>	<p data-bbox="577 608 1042 719">Remove all loads, disconnect the power source from this product, and wait for the unit to cool down to an appropriate temperature before proceeding.</p>
 <p data-bbox="79 906 286 932">Charging unavailable</p>	<p data-bbox="323 868 538 890">Bad wire connection.</p>	<p data-bbox="589 839 1031 919">Verify the connection status of the power line and the power supply to ensure they are properly connected.</p>

# SPECIFICATIONS

General Specifications	
Model name	PS800
Dimensions	276 x 209 x 230mm
Weight	6.5Kg
Capacity	512Wh
XT60 input	11.5V-50V 200W Max
AC output	50/60Hz (frequency switch available), rated at 800W Pure Sine Wave. Built in overload and short circuit protection.
USB output	2 x 5V/2.4A
USB-C output	2 x 20W
USB-C output	100W
DC 6530 output	12V/10A
Cigarette lighter output	12V/10A
Power off current	<500uA
Operating temperature	-10~40°C
Environment humidity	≤90%RH
Cycle life	4000 Cycles
Battery Specifications	
Battery type	LiFePO4
Single cell rated voltage	3.2V
Single cell rated capacity	20Ah
Battery pack rated voltage	25.6V
Battery pack output voltage	21V-29V
Battery pack rated capacity	512Wh

# SAFETY PRECAUTIONS

For safe operation and optimal performance, the PS800 Portable Power Station must be operated correctly. Please carefully read, understand, and follow all instructions and guidelines in this user guide. Failure to follow these instructions may result in damage to the unit, property, death, or serious injury.

**Disclaimer:** While iTechworld has taken every precaution to ensure the accuracy of the contents of this user guide, iTechworld assumes no responsibility for any errors or omissions.

**Furthermore, all specifications and functionality may change at any time without notice.**

It is best to view our website for the most up-to date information.

## **WARNING:**

People with physical disabilities, visual, sensory, or mental impairments (including children) should not use this device. Children should be supervised to ensure they do not play with the power station.

## **DANGER:**

Do not disassemble or modify the power station; doing so will result in your warranty being void, it may result in a risk of electrical shock, fire, death, or serious injury.

## **EXPLOSION HAZARD:**

Do not use the power station in an environment where flammable fumes or gases are present (such as gas bottles, petrol engines, or lead-acid battery compartments).

## **WARNING:**

Avoid using the power station in extreme temperatures, high humidity, direct sunlight, and near fire.

## **WARNING:**

Please use the cables recommended in this user guide; otherwise, it may result in damage to the power station, a risk of electrical shock, fire, death, or serious injury.

**WARNING:**

Do not drop the power station.

**WARNING:**

When not using the power station, turn off the power and unplug the power cord.

**WARNING:**

Do not use the power station and its accessories to connect equipment if there is a defect.

**WARNING:**

Do not use the power station in an environment where it will get wet, the unit is not waterproof.

**LIMITATIONS OF USE:**

Do not use in connection with life support systems or other medical equipment or devices.

**LONG TERM STORAGE:**

For long-term storage, discharge the power from full to empty once every three months, and then recharge it to 75%. Ensure the power is turned off completely.

# iTECHWORLD

THE POWER EXPERT

## CONTACT US



1300 483 249



[service@itechworld.com.au](mailto:service@itechworld.com.au)



[www.itechworld.com.au](http://www.itechworld.com.au)

When it comes to energy storage and creation at iTechworld, we take pride in being one of the biggest names in the industry. Based in Australia, we are a family-owned and operated business. With many more innovative products on the horizon we are committed to constantly raising the bar to provide bigger and better benefits to all our customers Australia-wide.

Whether you're an avid camper, 4WD enthusiast, freedom seeker or camper, we've got your power needs covered. Escape the grid without compromise, minimise your downtime and travel with comfort with our large range of leading products at great prices.

**iTechworld. The Power Expert.**

## LOVE YOUR PS800? **LEAVE A REVIEW**

